

IONIC AIR PURIFIER
ionicpro[®]
COMPACT



CA200

Owner's

Manual



Thank you for purchasing the Ionic Pro® Compact and congratulations on taking this important step in improving the quality of air in your home, office and other environments. Customer satisfaction is our number one goal. Your Ionic Pro® Compact is a premium air purifying appliance which comes with a limited one-year warranty.

Enjoy your Ionic Pro® Compact and visit our website for more exciting quality products and upgrades.

envionproducts.com



TABLE OF CONTENTS

PRODUCT BENEFITS	1
SAFETY INSTRUCTIONS	1
IMPORTANT WARNINGS	3
Main Parts	3
OPERATING THE IONIC PRO® COMPACT IONIC AIR PURIFIER	5
Getting Ready	5
Controls/Settings	6
Operation	7
CLEANING & MAINTENANCE	8
To Clean the Collection Blades	9
To Clean the Internal Ionizing Wires	10
Cleaning External Surfaces	11
DEEP CLEANING	11
TROUBLE-SHOOTING	12
MORE THINGS YOU SHOULD KNOW	13
Ozone and Your Health	13
ORDERING IONIC PRO® IONIC AIR PURIFIERS	13
ORDERING EXTRA COLLECTION BLADES	13
WARRANTY	14
ARBITRATION AGREEMENT	15

PRODUCT BENEFITS

IONIC PRO® COMPACT IONIC AIR PURIFIER PRODUCT BENEFITS

Your Ionic Pro® Compact ionic air purifier delivers all these wonderful benefits:

- > Totally silent
- > No filters to replace
- > Easy to use
- > Easy to clean
- > Energy-efficient

Breathe even easier when you order additional Ionic Pro® Air Purifier products today to enjoy fresh and purified air in every room of your home everyday. See our “Ordering Ionic Pro® Air Purifiers” section in this owner’s guide for details (Pg 13).

SAFETY INSTRUCTIONS

EXTREMELY IMPORTANT INFORMATION:

Safety precautions should always be used when operating this or any electrical appliance. Decrease the risk of electrocution, electric shock, injury or fire by reading and following all the warnings below:

Use only as described in this Ionic Pro® Compact ionic air purifier owner’s manual.

To reduce the risk of electric shock, do not attempt to service the product in any way other than in the manner described in the **“CLEANING & MAINTENANCE”** section of this owner’s manual.

Do not use the Ionic Pro® Compact ionic air purifier outdoors.

Do not use the Ionic Pro® Compact ionic air purifier in bathrooms or other humid environments, near fireplaces or in areas where flammable or combustible vapors or products may exist.

The Ionic Pro® Compact ionic air purifier operates at 120v AC and 60Hz only.

To reduce the risk of electric shock, this product has a grounding-type plug that has a third grounding pin. This plug will fit only into a grounding-type power outlet. If the plug does not fit into the outlet, contact qualified service personnel to install the proper outlet. Do not alter the plug in any way.

Always turn off all controls before unplugging the Ionic Pro® Compact ionic air purifier from outlet.

Always turn off and unplug this product from outlet before cleaning the collection blades.

Always turn this product off when not in use.

Never touch the internal collection blades, electrodes, ionizing wires, or any part of the Ionic Pro® Compact ionic air purifier with any object capable of conducting electricity.

SAFETY INSTRUCTIONS

Do not open the door of the Ionic Pro® Compact air purifier when it is in operation.

Attempting to disassemble the unit may cause serious personal injury to the user and/or result in considerable damage to the unit.

Do not place the Ionic Pro® Compact ionic air purifier’s cord near a heated surface.

Never operate the Ionic Pro® Compact ionic air purifier if the plug or cord is damaged or appears damaged. Only qualified service personnel should ever replace or attempt to replace a damaged power cord.

Never use the power cord to pick up, carry, drag, pull, or lift the Ionic Pro® Compact ionic air purifier. Do not pull the cord against or around sharp corners and edges. This could result in injury to the user or damage to the cord and is prohibited.

Always remove the plug from its power outlet by holding onto the plug itself and pulling gently. Never pull on the cord itself to unplug it from its power outlet.

Use care when operating the Ionic Pro® Compact ionic air purifier by keeping all fingers, body parts, hair, loose clothing and jewelry away from openings.

Never touch the Ionic Pro® Compact ionic air purifier or its plug when your hands are wet.


Never try to insert any object into the body of the Ionic Pro® Compact ionic air purifier when it is in operation.

The Ionic Pro® Compact ionic air purifier is an electrical appliance. Adult supervision is required when operating the Ionic Pro® Compact ionic air purifier in the presence of children.


Do not touch the metal blades until after discharging residual electricity by touching blades to an electrical ground such as a water pipe or metal faucet.

The collection blades and ionizing wires should be inspected frequently and cleaned regularly to prevent excessive accumulation that may result in an electrical flashover or a risk of fire.

This product complies with the maximum allowable concentration of ozone of 0.050 parts per million by volume (ppmv) in a 24-hour period. The Health Canada Guideline 2010 recommends that the maximum exposure limit, based on an averaging time of 8 hours, is 0.020 ppmv or less when tested in a sealed, controlled room approximately 30 m³.

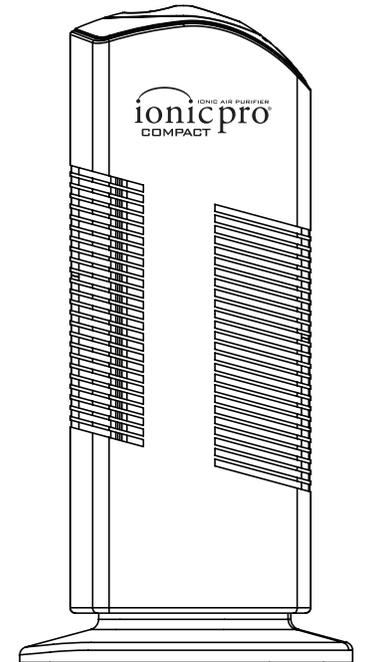

IMPORTANT WARNINGS

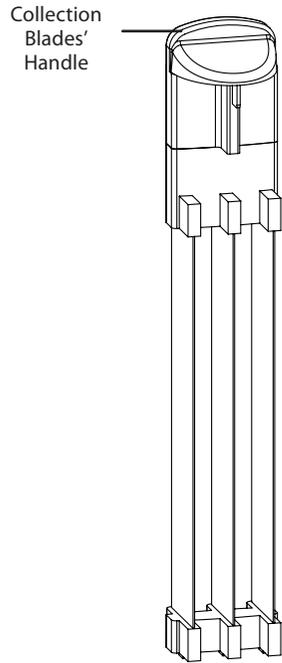

A.

MAIN PARTS

- A. Collection Blades
- B. Operating Panel
- C. Outer Case Housing
- D. AC Cord
- E. Base
- F. Wire Cleaning Mechanism
- G. Removable Cap

IMPORTANT WARNINGS

Before using your Ionic Pro® Turbo air purifier, please read all safety instructions and the following important information.


Collection Blades

Please look at the “Main Parts” diagram and locate the part labeled “A”.

These are the collection blades and are a vital part of this amazing ionic air purifying system. The collection blades are where unhealthy pollutants, allergens, irritants and odors are trapped when the Ionic Pro® Turbo Ionic Air Purifier air purifier is in proper working condition and in use.


READ THIS: The metal collection blades may contain a static charge. Do not touch the metal collection blades, even when you take the collection blade unit out for cleaning. (See “CLEANING & MAINTENANCE” section of this manual.)

The Ionic Pro® Compact ionic air purifier is designed to run quietly and requires very little time and effort to maintain in proper working condition. If you hear excessive noise or static coming from your Ionic Pro® Compact ionic air purifier, it generally indicates that the product needs to be cleaned. Turn off your Ionic Pro® Compact ionic air purifier, unplug the cord and carefully follow the cleaning instructions in the “CLEANING & MAINTENANCE” section of this manual.

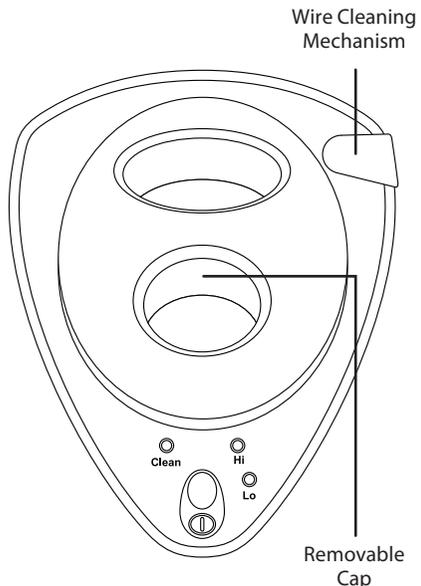

B.

IMPORTANT WARNINGS

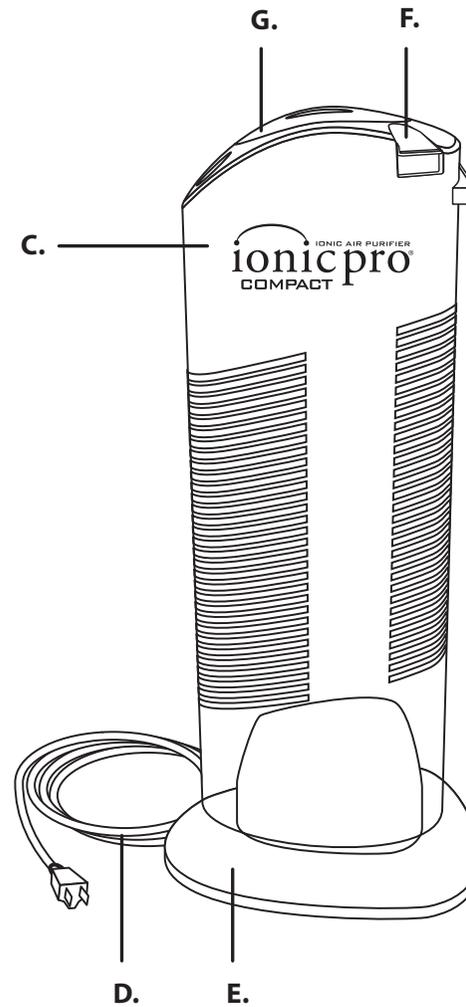

Do not place Ionic Pro® Compact ionic air purifier near a fireplace. Even if a fireplace is not in use, chimney dust and soot may circulate through the Ionic Pro® Compact ionic air purifier and then re-circulate and leave a residue on the unit and surrounding areas. We recommend not placing the Ionic Pro® Compact ionic air purifier anywhere near candles or oil lamps. If you intend to use candles or oil lamps near the Ionic Pro® Compact ionic air purifier despite this warning, make sure that the wicks are cut to no more than a quarter inch to cut down on smoke production.

If the product is still making excessive noise after cleaning and thoroughly drying the collection blades and re-inserting them as described in the “CLEANING & MAINTENANCE” section of this manual, turn off and unplug the unit. After you have turned off and unplugged the unit, see Diagram B or F for the location of the Wire Cleaning Mechanism. Lift and lower the Wire Cleaning Mechanism three to four times to thoroughly clean the internal ionizing wires (see Diagram H in the “CLEANING & MAINTENANCE” section). This movement helps to scrape free particles from the internal ionizing wires. To keep your Ionic Pro® Compact ionic air purifier working properly, it will be necessary to clean the collection blades after every month of use and the internal ionizing wires after every two weeks of use (see “CLEANING & MAINTENANCE” and “DEEP CLEANING” section of this manual for the proper techniques).

WARNING: After cleaning the collection blades (see “CLEANING & MAINTENANCE” section) with soap and water, allow at least 24 hours for the collection blades to dry thoroughly before inserting them back into the unit. Water can easily get trapped along the collection blades’ many surfaces and edges and damage could result if there is any moisture on the collection blades.


You will need to clean your Ionic Pro® Compact ionic air purifier more often if it has been exposed to heavy pollution.

OPERATING THE IONIC PRO® COMPACT IONIC AIR PURIFIER

Getting Ready

Locate a level surface on which to place your Ionic Pro® Compact ionic air purifier and a grounded 120v outlet (follow warnings described in the **"SAFETY INSTRUCTIONS"** section of this manual). Position your Ionic Pro® Compact ionic air purifier at least one foot (12 inches) from the wall.

Plug in the unit. *You are now ready to turn on your Ionic Pro® Compact ionic air purifier!*

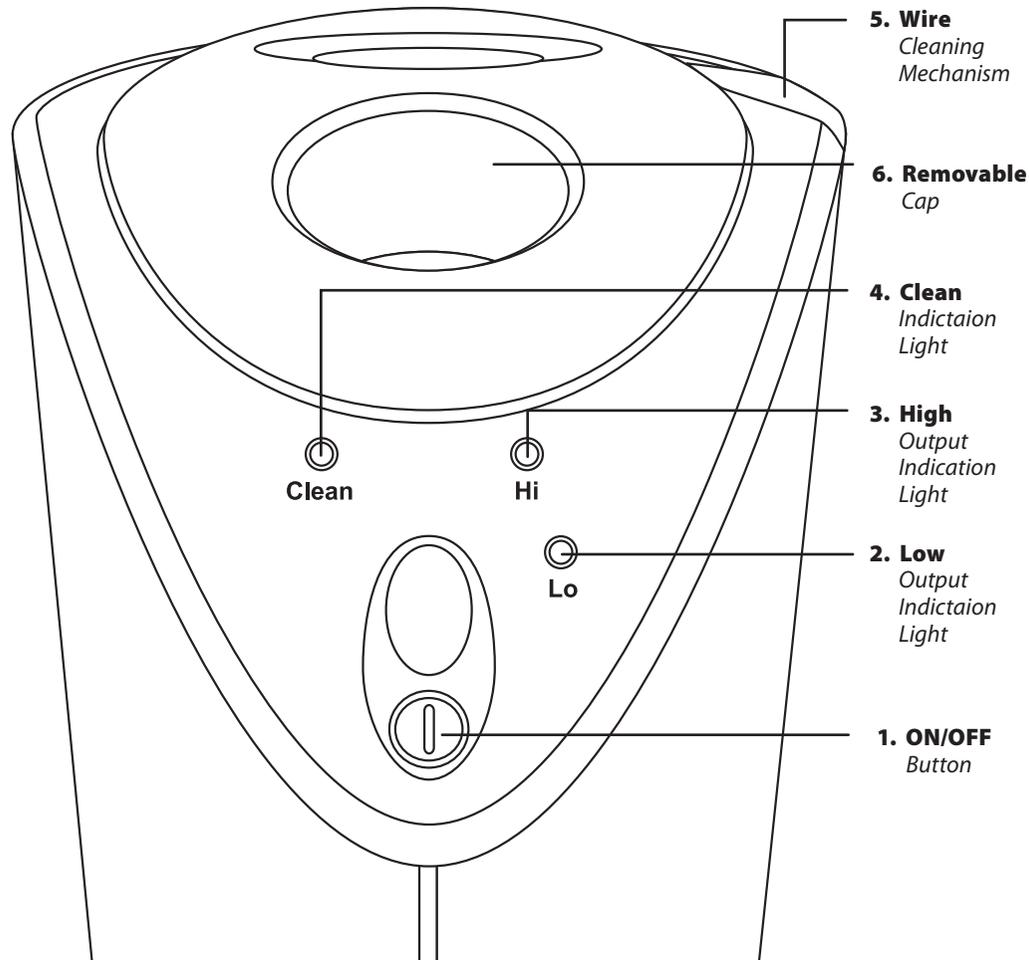

OPERATING THE IONIC PRO® COMPACT IONIC AIR PURIFIER

Controls/Settings

- 1. ON/OFF Button** – Turns unit on and off.
- 2. Lo (low output indication light)** – At this setting, the unit will cycle ON and OFF. It will cycle ON for approximately 25 seconds, and then rest for 25 seconds. This cycling will continue as long as the unit is in Lo mode.
- 3. Hi (high output indication light)** – At this setting, the unit stays ON continuously.
- 4. Clean (clean indication light)** – This red light goes on when your Ionic Pro® Compact ionic air purifier needs to be cleaned, or the unit is experiencing some other problem. See the **"CLEANING & MAINTENANCE"** and **"TROUBLE-SHOOTING"** sections.
- 5. Wire Cleaning Mechanism** – This is used to clean the internal ionizing wires. See **"CLEANING & MAINTENANCE"** for full details.
- 6. Removable Cap** – Lift off the Removable Cap to locate collection blades for cleaning (as described in **"CLEANING & MAINTENANCE"** section).

IONIC AIR PURIFIER
ionicpro
COMPACT

OPERATING THE IONIC PRO® COMPACT IONIC AIR PURIFIER

Operation

Set up the Ionic Pro® Compact ionic air purifier as described in "Getting Ready". Press the **ON/OFF** button to activate your ionic air purifier and get ready to enjoy clean, ionized air that cycles through pre-programmed run/rest intervals according to the setting you select.

The Ionic Pro® Compact ionic air purifier **automatically defaults to the Hi (high/maximum output) setting** whenever the unit is turned on.

Press the ON/OFF button one more time to select the Lo (low) output setting to enjoy intermittent run/rest periods.


Press the ON/OFF button a third time to turn the unit off.

The indicator LEDs light up to indicate your current setting (Lo, Hi).

Clean Light:

The red CLEAN light will turn on and the unit will shut down if cleaning is overdue.

The Ionic Pro® Compact ionic air purifier's collection blades must be cleaned after month of use and the internal ionizing wires must be cleaned after every two weeks of use (see "**CLEANING & MAINTENANCE**" for full directions). Once the collection blades are properly cleaned, thoroughly dried and re-inserted into your Ionic Pro® Compact ionic air purifier and the internal ionizing wires are properly cleaned, normal operations should continue. If not, see "**DEEP CLEANING**" and "**TROUBLE-SHOOTING**".

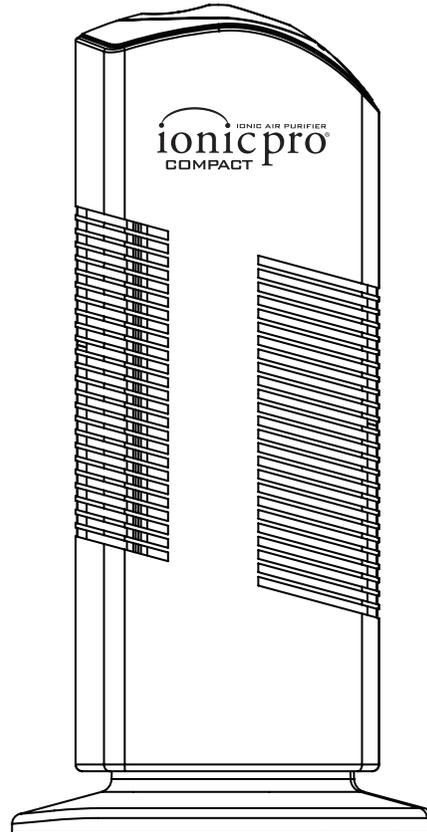


CLEANING & MAINTENANCE


With very little effort, the Ionic Pro® Compact ionic air purifier delivers cleaner, fresher, healthier air to your indoor environments.

Keep your Ionic Pro® Compact ionic air purifier functioning properly by cleaning the collection blades after every month of use as recommended. The internal ionizing wires are an important part of the Ionic Pro® air purifying system and need to be cleaned after every two weeks of use or if your unit starts to make a buzzing noise (see "**TO CLEAN IONIZING WIRES**" and "**DEEP CLEANING**" sections).

More frequent cleaning is often required if your Ionic Pro® Compact ionic air purifier is new or if you place it in a different location. Exposing your Ionic Pro® Compact ionic air purifier to candle/oil lamp/fireplace soot and smoke is not recommended and will require the collection blades to be cleaned after every exposure (see "**IMPORTANT WARNINGS**").

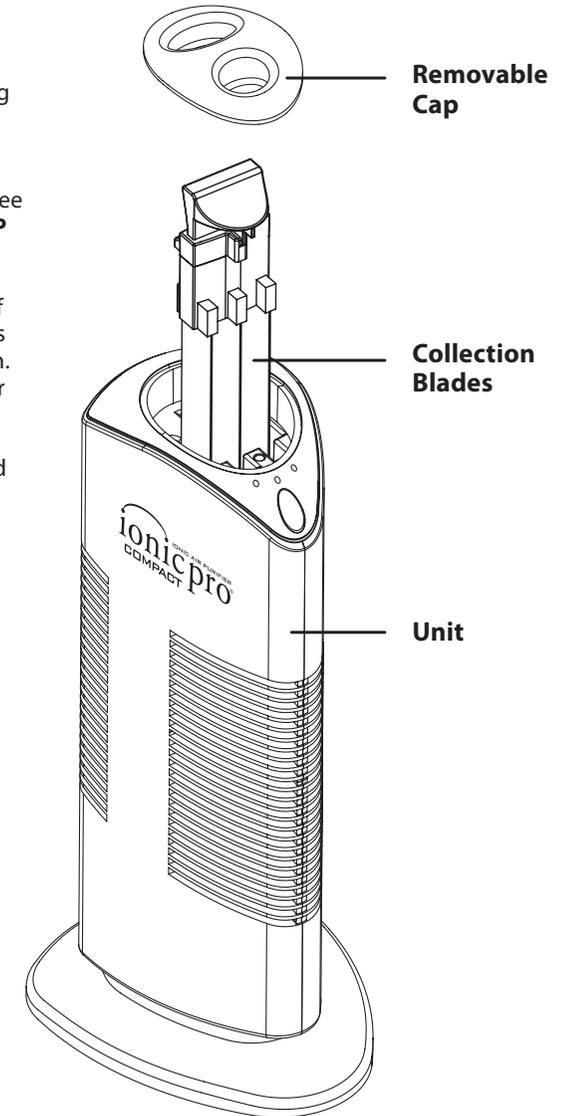

CLEANING & MAINTENANCE

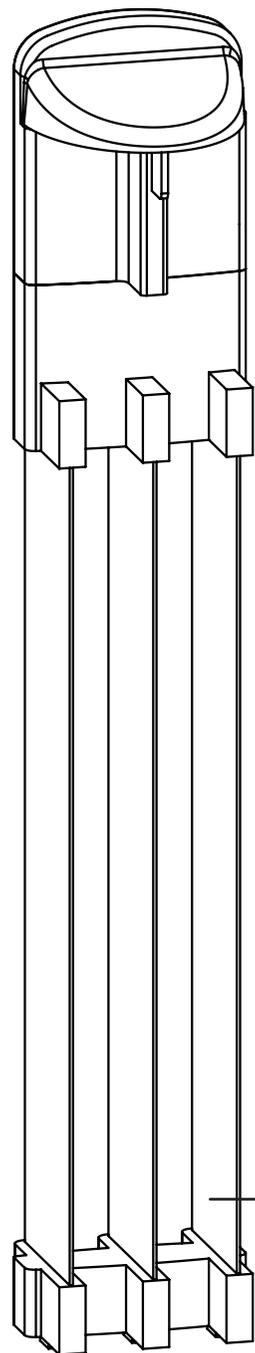

Helpful Tips: Remember to clean your Ionic Pro® Compact ionic air purifier every month and any time the red CLEAN/FAULT light comes on or whenever you hear your unit begin to make excessive noise.

To Clean the Collection Blades

Turn off and unplug your Ionic Pro® Compact air purifier. Let the unit rest a minute.

Next, lift off the removable cap and pull up on the collection blades' handle to slide the collection blades out of the top of your Ionic Pro® ionic air purifier.


Do not touch the metal blades until after discharging residual electricity by touching blades to an electrical ground such as a water pipe or metal faucet. Wipe away the trapped particles collected on the three blades with a slightly damp sponge or cloth. If you use a slightly damp cloth to clean the blades, it is possible the collection blades will be completely dry within two to three hours. Always allow the collection blades to dry thoroughly before resuming use.

IMPORTANT: To avoid damaging your Ionic Pro® Compact ionic air purifier, make sure the collection blades are completely dry and free of all moisture and that your Ionic Pro® Compact ionic air purifier is turned off and unplugged before attempting to re-insert the collection blades.

If you have used soap and water to clean the collection blades, wait at least 24 hours to ensure that they are thoroughly dry before re-inserting them into your Ionic Pro® Compact ionic air purifier.

Collection Blades

CLEANING & MAINTENANCE

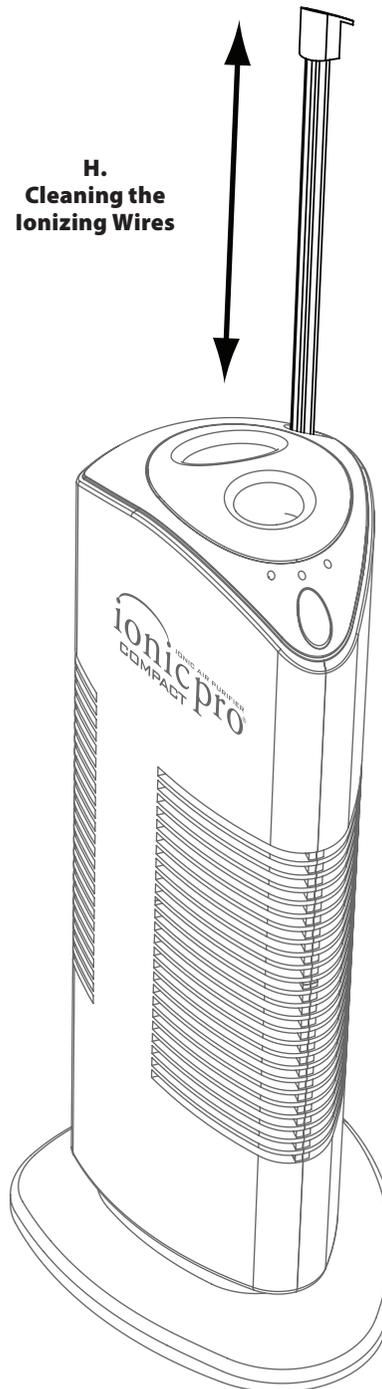

H.
Cleaning the
Ionizing Wires

To Clean the Ionizing Wires

The internal ionizing wires need to be cleaned after every two weeks of use. There is a **Wire Cleaning Mechanism** used to clean the internal ionizing wires which you slide up and down to scrape off particle residue, (see Diagram B of the Operating Panel to locate the Wire Cleaning Mechanism). Lift and lower the Wire Cleaning Mechanism three or four times to thoroughly clean the ionizing wires (see Diagram H).

REMEMBER TO ALWAYS RETURN THE WIRE CLEANING MECHANISM TO ITS ORIGINAL POSITION BEFORE ATTEMPTING TO RESUME USE OR THE UNIT WILL NOT FUNCTION.

CLEANING & MAINTENANCE

DEEP CLEANING

Noisy functioning (audible loud buzzing sound) is a sign that your Ionic Pro® Compact ionic air purifier is overdue for a complete clean-up of the collection blades and the internal ionizing wires. The internal ionizing wires must be kept clean to ensure silent and normal operation.

To Deep Clean:



1. Before beginning, make sure you have read all of the safety precautions and cleaning instructions located in the **“SAFETY INSTRUCTION”, “IMPORTANT WARNINGS”, and “CLEANING & MAINTENANCE”** sections of this owner’s manual.
2. First, turn OFF and unplug your Ionic Pro® Compact ionic air purifier.
3. Let it rest for a minute before removing the collection blades as described in the “To Clean the Collection Blades” section of this manual.
4. Use a cloth and warm, sudsy water to wipe away dirt particles on the blades’ surfaces and edges.
5. Rinse and let the blades dry thoroughly for 24 hours before re-inserting them into your Ionic Pro® Compact ionic air purifier. If desired, you can purchase a second set of collection blades to use while the original blades are drying to allow for virtually uninterrupted air purification. (See the **“ORDERING EXTRA COLLECTION BLADES”** section of this owner’s manual for details.)
6. Clean the ionizing wires as described in the “To Clean the Ionizing Wires” section of this manual.

Cleaning External Surfaces

Over time, some particles and dust may accumulate on the external surfaces of your Ionic Pro® Compact ionic air purifier.

If this happens:

1. Turn off and unplug the unit.
2. Mix one ounce of soap or detergent with five ounces of water and apply sparingly with a moist sponge to wipe the outer case surfaces.
3. Do not allow any water to slip into the internal parts of the Ionic Pro® Compact ionic air purifier as this could damage its functioning and may result in injury to you.
4. Allow the unit to dry for at least 24 hours before resuming use.

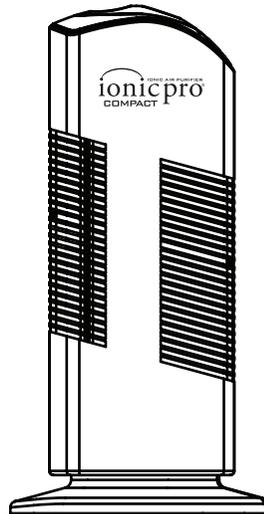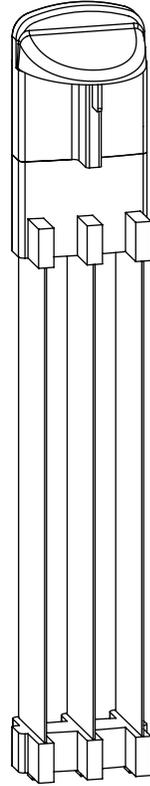

TROUBLE-SHOOTING

TROUBLE	REASON	TROUBLE-SHOOTING
Indication/Setting light does not turn on.	Machine is unplugged. ON/OFF button has not been pressed.	Check if plug is loose. Press the ON/OFF button.
Red CLEAN light is on or the unit shuts down.	Too much dust has accumulated. AC input unstable or overloaded. Moisture on collection blades. Red light may go on if the unit just needs to be “reset”.	Turn off, unplug & lift the lever to the wire cleaning mechanism to clean the ionizing wires. Turn off, allow unit to rest a while to return to normal. Temperature & moisture level and then turn on again. Press “ON” button to reset.
Excessive noise generated.	Collection blades are not installed properly. Too much dust has accumulated. Internal parts are wet.	Remove & replace collection blades & press “On” button. Clean and dry blades and ionizing wires thoroughly.* Keep the machine dry.
Collection blades do not go back in.	Improper orientation.	Reverse blade orientation.
Indication light does not go on.	Collection blades are not completely inserted Wire Cleaning Mechanism is not completely inserted.	Check to see that the blades are completely seated in housing Check to see that Wire Cleaning Mechanism is completely seated in housing.

*See **“CLEANING & MAINTENANCE”** section.

Ozone and Your Health

After you activate your Ionic Pro® Compact ionic air purifier, you may notice a new clean scent.

MORE THINGS YOU SHOULD KNOW

Important Information For Your Health.

The Ionic Pro® Compact ionic air purifying system utilizes an ionizing process which results in very low ozone emission. The Ionic Pro® Compact air purifier complies with U.S. safety requirements for low ozone emission (less than 50 parts per billion) and meets the UL867 standard for consumer products. UL867 is the U.L. standard for safety for electrostatic air cleaners.

Individuals with a history of respiratory disease, asthma, heart disease, lung disease, breathing problems or concerns about ozone should ask their doctor whether the concentrations of ozone generated by this or other commercial ionic air purifiers are appropriate for their specific health needs.

ORDERING IONIC PRO® IONIC AIR PURIFIERS

There's no such thing as too much clean air. **Breathe even easier when you order additional Ionic Pro® air purifier products today to enjoy fresh and purified air in every room of your home every day.** Visit our website at envionproducts.com or call **1.800.875.8577** to order your new Ionic Pro® air purifiers today and to find out about our entire line of exciting products.

ORDERING EXTRA COLLECTION BLADES

Enjoy virtually uninterrupted air purification by ordering an extra set of collection blades today. This is a great way to make sure you can always have a clean and thoroughly dry set of collection blades available to insert into your Ionic Pro® Compact ionic air purifier whenever the other blades are being cleaned and dried for 24 hours. Visit our website at envionproducts.com or call **1.800.875.8577** to order your new collection blades today.



ONE YEAR LIMITED WARRANTY

One Year limited Warranty

Your Ionic Pro® Compact ionic air purifier is warranted to be free from defects in materials and workmanship for one year from the original purchase date. Should the product have a defect in materials or workmanship, we will repair or replace it without charge to you (a shipping and processing fee will apply). To obtain service under warranty, simply call our customer service center toll-free at **1.800.875.8577**.

This warranty does not cover damage caused by accident, misuse or any use other than as intended and described in this product manual, or damage resulting from failure to maintain and clean this product as specified in this product manual. This warranty applies only to the original purchaser of the Ionic Pro® Compact ionic air purifier.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED WILL APPLY AFTER THIS PERIOD.

Some states do not allow limitations on the duration of implied warranties, so the above limitation may not apply to you. While this warranty gives you specific legal rights, you may also have other rights which may vary from state to state.

Contact Info for Warranty Service:

Ionic Pro® by Envion®
 P.O. Box 9169 | Van Nuys, CA | 91409-8291
 1.800.875.8577 | envionproducts.com
customerservice@envionproducts.com

Ionic Pro Compact

©2018 Envion, LLC. All Rights Reserved.

U.S. Patent Nos. D495,042; D505,488; D522,116; 6,855,190; 6,946,103; and 6,977,008.
 Chinese Patent No. ZL03353322.9; ZL200420006826.0; ZL200420077199.X, and ZL200620004930.5.
 Hong Kong Patent Nos. HK1063973; HK1066437; and HK1082896.

ARBITRATION AGREEMENT

PLEASE READ THIS AGREEMENT CAREFULLY. YOU ACCEPT THE TERMS OF THIS AGREEMENT BY RETAINING THE PRODUCT(S) SHIPPED IN CONNECTION WITH THIS AGREEMENT (THE "PRODUCTS") FOR MORE THAN THIRTY (30) DAYS AFTER RECEIPT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, YOU MAY RETURN THE PRODUCT TO COMPANY WITHIN THIRTY (30) DAYS OF RECEIPT FOR A FULL REFUND.

THIS ARBITRATION AGREEMENT ("AGREEMENT") AFFECTS YOUR LEGAL RIGHTS AND REMEDIES BY PROVIDING THAT DISPUTES BETWEEN YOU AND THE MANUFACTURER, DISTRIBUTOR AND/OR SELLER OF THIS PRODUCT (COLLECTIVELY, "COMPANY"), MUST BE RESOLVED THROUGH BINDING ARBITRATION AND NOT IN COURT. IT ALSO PROVIDES THAT ANY DISPUTE CANNOT BE RESOLVED IN A CLASS ACTION OR OTHER PROCEEDING WHERE YOU REPRESENT OTHER PERSONS OR OTHER PERSONS REPRESENT YOU, AND THAT NO CLASS OR REPRESENTATIVE ARBITRATIONS ARE PERMITTED. PLEASE CAREFULLY READ ALL TERMS IN THIS AGREEMENT.

1. RESOLUTION OF CLAIMS OR DISPUTES.

Any claim or dispute between you and Company (or any of Company's subsidiaries or affiliates) arising out of or relating in any way to the Product or this Agreement shall be resolved through final, binding arbitration. This arbitration obligation is reciprocally binding on both you and the Company and applies regardless of whether the claim or dispute involves a tort, fraud, misrepresentation, product liability, negligence, violation of a statute, or any other legal theory. Both you and Company specifically acknowledge and agree that you waive your right to bring a lawsuit based on such claims or disputes and to have such lawsuit resolved by a judge or jury.

2. LIMITATION OF LEGAL REMEDIES.

All arbitrations under this Agreement shall be conducted on an individual (and not a class-wide) basis, and an arbitrator shall have no authority to award class-wide relief. You acknowledge and agree that this Agreement specifically prohibits you and the Company from commencing arbitration proceedings as a representative of others or joining in any arbitration proceedings brought by any other person. The parties agree that no class or representative actions of any type are permitted.

3. ARBITRATION PROCEDURES.

- a. Before instituting an arbitration, if you have any dispute, we strongly encourage you to contact the Company to try to resolve the matter by calling 800.218.3560, although you are not required to do so.
 - b. The arbitration of any claim or dispute under this Agreement shall be conducted in accordance with the expedited procedures set forth in the JAMS Comprehensive Arbitration Rules and Procedures as those Rules exist on the date you receive the Product, including Rules 16.1 and 16.2 of those Rules. These rules and procedures are available by calling JAMS or by visiting its web site at www.jamsadr.com. The arbitration of any claim or dispute under this Agreement shall be conducted by an arbitrator who has at least five years of experience conducting arbitrations.
 - c. The arbitration of any claim or dispute under this Agreement shall be conducted in the State of California or the location in which you received this Agreement. For claims of \$10,000 or less, you may choose whether the arbitration proceeds in person, by telephone, or based only on submissions.
 - d. The Company shall pay costs for the arbitration of claims, including any JAMS Case Management Fee and all professional fees for the arbitrator's services. The Company shall pay the fees and costs of its own counsel, experts and witnesses and shall not be able to recoup them from you even if you do not prevail in the arbitration. Unless otherwise provided by law, you acknowledge and agree that you shall pay the fees and costs of your own counsel, experts and witnesses.
- ## 4. CHOICE OF LAW.
- The arbitration provisions of this Agreement and any arbitration conducted pursuant to the terms of this Agreement shall be governed by the Federal Arbitration Act (9 U.S.C. Secs. 1-16). In this respect, the parties acknowledge that this Agreement involves a transaction conducted in interstate commerce. Otherwise, this Agreement and the rights of the parties hereunder shall be governed by and construed in accordance with the laws of the State of California, exclusive of conflict or choice of law rules.

5. SEVERABILITY.

If any provision of this Agreement is declared or found to be unlawful, unenforceable or void, such provision will be ineffective only to the extent that it is found unlawful, unenforceable or void, and the remainder of the provision and all other provisions shall remain fully enforceable.

IONIC AIR PURIFIER
ionicpro
COMPACT





CA200

 IONIC AIR PURIFIER
COMPACT